


### Clutch play – checking, adjusting I, III

To ensure perfect functioning of the clutch and its operating mechanism, the basic setting and lever play must match.  
To check the basic setting, disconnect the clutch cable on the clutch release arm.

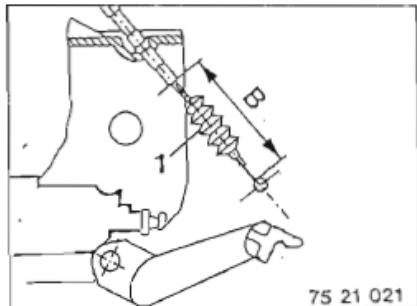


00-34.0

#### Basic setting:

Push back grommet (1) slightly and adjust dimension B to  $75 \pm 1$  mm at the clutch lever adjusting screw (see next illustration) with BMW adjusting gauge 21 3 500.

by a kind approval of the BMW AG for  
motor vehicles  
8.87

Slacken off knurled nut (1) on adjusting screw on the clutch lever and turn the adjusting screw (2) until dimension B is obtained.  
Connect clutch cable up to release arm again.

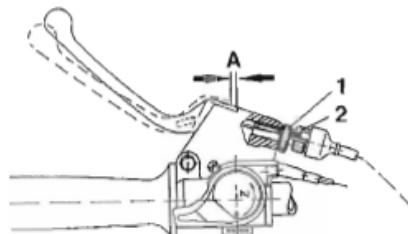

75 21 020

Slacken off locking nut (1).  
Slacken adjusting screw (arrow) through one to two revolutions, tighten slowly until resistance is felt and then secure with locking nut (1).


After obtaining basic setting, adjust clutch lever play to dimension A at adjusting screw and secure with locking nut.

*Warning:*

Adjust for wear only at the screw on the release arm.

A = 2 + 0.5 mm

A = 4 + 0.5 mm

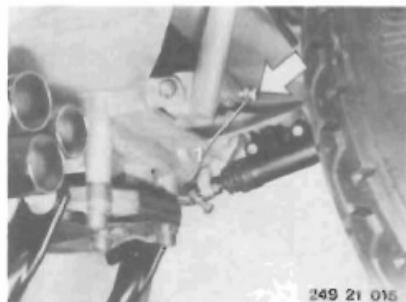

249 21 015