


**Fox Racing Shox**  
130 Hangar Way  
Watsonville, CA 95076

**SPRING PARTS SEQUENCE**  
(for spring removal)

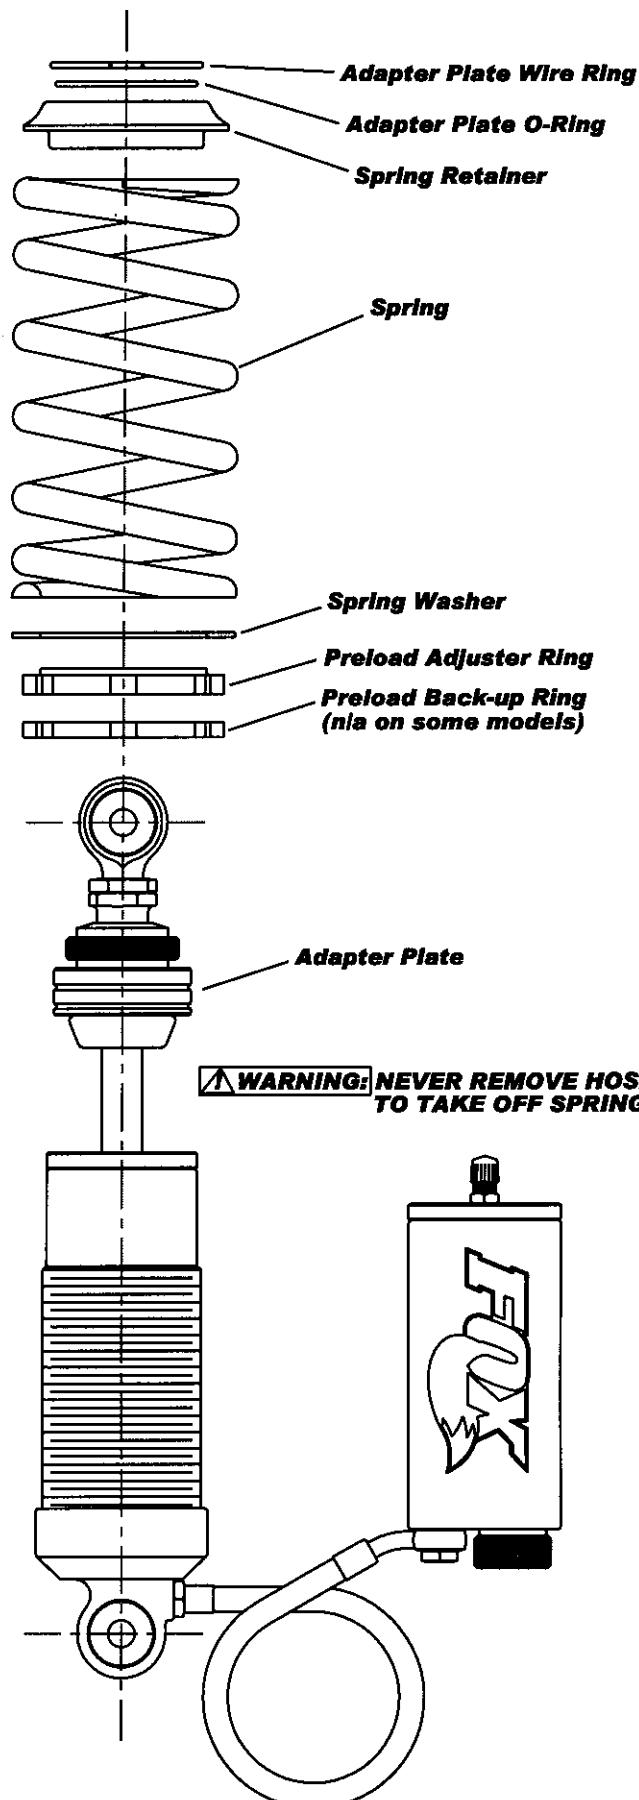

**Spring Removal Instructions:**

**Note:** as you go through the removal of the spring, take special care to note the location and orientation of the parts. This will come in handy for the Installation of the new spring.

- 1.) Loosen preload adjuster rings until the spring is no longer preloaded and moves freely on the shock body.
- 2.) Slide the spring retainer toward the shock body until it separates from the adapter plate.
- 3.) Remove the adapter plate wire ring and o-ring from the adapter plate.
- 4.) Remove the spring retainer and the spring is now able to be removed.
- 5.) To reassemble, reverse the disassembly procedure.

**Be certain to set the suspension sag according to the setup manual and double check all hardware for proper assembly prior to riding the motorcycle.**