

---

A9001 Instrument panel control unit  
A9190 ABS control unit  
B9193 Wheel-speed sensor, front  
B9194 Wheel-speed sensor, rear  
G9230 Battery  
H9010 Lamp indicator lamp  
H9190 Warning light, ABS  
K9196 ABS relay  
K9197 ABS warning relay  
S9060 Ignition switch  
S9195 ABS button  
X9188 STVB ABS relay  
X9189 STVB ABS relay  
X9196 STVB ABS relay  
X9230 Battery positive  
X9232 Ground  
X9400 Ground I  
X9401 Connector 31 I  
X9402 Connector 31 II  
X9430 Connector 30U  
X9450 Connector 15U  
X9590 Diagnosis plug