

---

A9001 Instrument panel control unit  
A9190 ABS control unit  
A9500 Control unit, engine electronics  
B9540 Hall sensor  
E9010 Headlight  
E9015 Side light  
F9200 Fuse box I  
G9230 Battery  
G9240 Alternator  
K9100 Fuel pump relay  
K9110 Engine-electronics relay  
K9120 Load relief relay  
K9130 Starter relay  
K9140 Fan relay  
K9150 Horn relay  
K9196 ABS relay  
K9901 Relay, raise windscreen  
K9902 Relay, lower windscreen  
M9130 Starter  
M9140 Fan  
R9611 Spark plug 1  
R9611 Spark plug 1  
R9612 Spark plug 2  
R9612 Spark plug 2  
R9613 Spark plug 3  
R9613 Spark plug 3  
R9614 Spark plug 4  
R9614 Spark plug 4  
S9021 Hazard warning switch  
S9051 Brake light switch, hand  
S9052 Brake light switch, foot  
S9060 Ignition switch  
S9070 Left multi-function switch  
S9080 Right multi-function switch  
S9083 Emergency stop switch  
S9084 Starter switch  
S9091 Clutch switch  
S9092 RFH switch  
S9092 RFH switch  
S9093 Side-stand switch  
T9510 Ignition coil 1  
T9520 Ignition coil 2  
X9031 STVB front left turn signal -  
X9041 STVB front right turn signal indicator -  
X9130 STVB starter relay  
X9131 STVB starter  
X9133 STVB starter relay  
X9134 STVB starter relay  
X9188 STVB ABS relay  
X9220 STVB fuel level indicator  
X9230 Battery positive  
X9231 Battery ground  
X9233 Gearbox ground  
X9241 STVB alternator +  
X9340 STVB lighting/rear direction indicator  
X9349 STVB optional accessory  
X9350 STVB optional extra  
X9351 STVB heated handlebar grips  
X9353 STVB radio II  
X9354 STVB DWA  
X9358 STVB map light  
X9400 Ground I  
X9500 STVB control unit, engine electronics  
X9501 STVB control unit ground, engine electronics  
X9513 Ignition coil ground  
X9900 STVB windscreen adjustment