
A9001 Instrument panel control unit
A9020 Flasher unit
F9200 Fuse box I
G9230 Battery
H9030 Front left turn signal indicator
H9031 Turn signal repeater
H9031 Turn signal repeater
H9035 Rear left turn signal indicator
H9040 Front right turn signal indicator
H9041 Right turn signal repeater
H9045 Rear right turn signal indicator
H9151 Horn I
H9152 Horn II
K9120 Load relief relay
K9150 Horn relay
S9021 Hazard warning switch
S9060 Ignition switch
S9070 Left multi-function switch
S9072 Horn switch
S9073 Left turn signal switch
S9080 Right multi-function switch
S9082 Right turn signal switch
S9085 Turn indicator cancel switch
X9031 STVB front left turn signal -
X9032 STVB front left turn signal +
X9036 STVB rear left turn signal -
X9037 STVB rear left turn signal +
X9041 STVB front right turn signal indicator -
X9042 STVB front right turn signal indicator +
X9046 STVB rear right turn signal indicator -
X9047 STVB rear right turn signal indicator +
X9102 DRS horn/load relief relay
X9131 STVB starter
X9155 STVB horn I
X9156 STVB horn II
X9230 Battery positive
X9231 Battery ground
X9232 Ground
X9340 STVB lighting/rear direction indicator
X9400 Ground I
X9401 Connector 31 I
X9402 Connector 31 II
X9430 Connector 30U
X9450 Connector 15U
X9457 Connector 15A7
X9465 Connector MUTE
X9480 Connector 15E
X9483 Connector BL
X9484 Connector BR