

---

A9910 Radio  
F9200 Fuse box I  
G9230 Battery  
H9913 Speaker left  
H9914 Speaker right  
S9060 Ignition switch  
X9060 STVB Ignition switch  
X9230 Battery positive  
X9231 Battery ground  
X9232 Ground  
X9353 STVB radio II  
X9400 Ground I  
X9404 Connector 31 IV  
X9430 Connector 30U  
X9439 Connector 30A19  
X9458 Connector RA8  
X9910 STVB radio  
X9911 STVB radio  
X9912 STVB radio  
X9913 STVB speaker, left  
X9914 STVB speaker, right  
X9915 STVB speaker, left -  
X9916 STVB speaker, left +  
X9917 STVB speaker, right -  
X9918 STVB speaker, right +