
A9910 Radio
F9200 Fuse box I
G9230 Battery
H9913 Speaker left
H9914 Speaker right
S9060 Ignition switch
X9060 STVB Ignition switch
X9230 Battery positive
X9231 Battery ground
X9232 Ground
X9353 STVB radio II
X9400 Ground I
X9404 Connector 31 IV
X9430 Connector 30U
X9439 Connector 30A19
X9458 Connector RA8
X9910 STVB radio
X9911 STVB radio
X9912 STVB radio
X9913 STVB speaker, left
X9914 STVB speaker, right
X9915 STVB speaker, left -
X9916 STVB speaker, left +
X9917 STVB speaker, right -
X9918 STVB speaker, right +