
A9001 Instrument panel control unit
A9190 ABS control unit
B9193 Wheel-speed sensor, front
B9194 Wheel-speed sensor, rear
G9230 Battery
H9190 Warning light, ABS
K9196 ABS relay
K9197 ABS warning relay
S9060 Ignition switch
S9195 ABS button
X9188 STVB ABS relay
X9189 STVB ABS relay
X9196 STVB ABS relay
X9230 Battery positive
X9232 Ground
X9310 STVB, engine wiring harness
X9400 Ground I
X9401 Connector 31 I
X9402 Connector 31 II
X9430 Connector 30U
X9450 Connector 15U
X9590 Diagnosis plug