

---

A9001 Instrument panel control unit  
A9020 Flasher unit  
A9190 ABS control unit  
A9500 Control unit, engine electronics  
E9010 Headlight  
E9015 Side light  
F9200 Fuse box I  
G9230 Battery  
G9240 Alternator  
H9030 Front left turn signal indicator  
H9040 Front right turn signal indicator  
K9100 Fuel pump relay  
K9110 Engine-electronics relay  
K9120 Load relief relay  
K9130 Starter relay  
K9140 Fan relay  
K9150 Horn relay  
K9196 ABS relay  
M9130 Starter  
R9611 Spark plug 1  
R9611 Spark plug 1  
R9612 Spark plug 2  
R9612 Spark plug 2  
R9613 Spark plug 3  
R9613 Spark plug 3  
R9614 Spark plug 4  
R9614 Spark plug 4  
S9021 Hazard warning switch  
S9051 Brake light switch, hand  
S9052 Brake light switch, foot  
S9060 Ignition switch  
S9070 Left multi-function switch  
S9080 Right multi-function switch  
S9083 Emergency stop switch  
S9084 Starter switch  
S9091 Clutch switch  
S9092 RFH switch  
S9092 RFH switch  
S9093 Side-stand switch  
T9510 Ignition coil 1  
T9520 Ignition coil 2  
X9102 DRS horn/load relief relay  
X9130 STVB starter relay  
X9131 STVB starter  
X9133 STVB starter relay  
X9134 STVB starter relay  
X9188 STVB ABS relay  
X9220 STVB fuel level indicator  
X9230 Battery positive  
X9231 Battery ground  
X9233 Gearbox ground  
X9241 STVB alternator +  
X9310 STVB, engine wiring harness  
X9321 STVB on-board socket 1  
X9340 STVB lighting/rear direction indicator  
X9351 STVB heated handlebar grips  
X9354 STVB DWA  
X9400 Ground I  
X9402 Connector 31 II  
X9404 Connector 31 IV

X9430 Connector 30U  
X9434 Connector 30A4  
X9450 Connector 15U  
X9451 Connector 15A1  
X9451 Connector 15A1  
X9457 Connector 15A7  
X9480 Connector 15E  
X9481 Connector 15N  
X9490 Connector 15EL  
X9500 STVB control unit, engine electronics  
X9501 STVB control unit ground, engine electronics  
X9513 Ignition coil ground  
X9690 STVB oxygen sensor  
X9690 STVB oxygen sensor