

---

B9220 Fuel level sensor  
F9200 Fuse box I  
H9151 Horn I  
H9152 Horn II  
R9931 Left heated handlebar grip  
R9932 Right heated handlebar grip  
S9080 Right multi-function switch  
S9930 Switch for heated handlebar grips  
X9155 STVB horn I  
X9156 STVB horn II  
X9310 STVB, engine wiring harness  
X9321 STVB on-board socket 1  
X9351 STVB heated handlebar grips  
X9354 STVB DWA  
X9400 Ground I  
X9401 Connector 31 I  
X9402 Connector 31 II  
X9434 Connector 30A4  
X9451 Connector 15A1  
X9451 Connector 15A1  
X9457 Connector 15A7  
X9482 Connector 58  
X9485 Connector horn  
X9933 Connector heated handlebar grips