
A9020 Flasher unit
A9500 Control unit, engine electronics
B9210 Vehicle speed sensor
B9220 Fuel level sensor
E9001 Instrument lights
F9200 Fuse box I
G9230 Battery
H9001 Warning light, coolant temperature
H9002 Telltale light, neutral
H9010 Lamp indicator lamp
H9012 Telltale light, high-beam headlight
H9092 Gear indicator
H9095 Warning light, engine oil pressure
H9220 Fuel warning lamp
H9240 Warning light, battery charge current
K9120 Load relief relay
P9002 Revolution counter
P9210 Speedometer
S9021 Hazard warning switch
S9060 Ignition switch
S9070 Left multi-function switch
S9071 High beam switch
S9080 Right multi-function switch
S9092 RFH switch
S9092 RFH switch
S9095 Oil pressure switch
X9230 Battery positive
X9231 Battery ground
X9232 Ground
X9242 STVB alternator
X9242 STVB alternator
X9310 STVB, engine wiring harness
X9400 Ground I
X9401 Connector 31 I
X9430 Connector 30U
X9450 Connector 15U
X9480 Connector 15E
X9483 Connector BL
X9484 Connector BR
X9590 Diagnosis plug