
A9001 Instrument panel control unit
E9001 Instrument lights
E9010 Headlight
E9013 Tail light
E9015 Side light
F9200 Fuse box I
G9230 Battery
H9010 Lamp indicator lamp
H9012 Telltale light, high-beam headlight
H9050 Brake light
K9120 Load relief relay
S9051 Brake light switch, hand
S9052 Brake light switch, foot
S9060 Ignition switch
S9070 Left multi-function switch
S9071 High beam switch
X9001 STVB instrument panel control unit
X9013 STVB rear light -
X9014 STVB tail light
X9015 STVB parking light
X9016 STVB parking light
X9053 STVB brake light -
X9054 STVB brake light +
X9080 STVB right multi-function switch
X9230 Battery positive
X9231 Battery ground
X9232 Ground
X9310 STVB, engine wiring harness
X9340 STVB lighting/rear direction indicator
X9400 Ground I
X9401 Connector 31 I
X9402 Connector 31 II
X9404 Connector 31 IV
X9430 Connector 30U
X9450 Connector 15U
X9451 Connector 15A1
X9451 Connector 15A1
X9480 Connector 15E
X9482 Connector 58