
A9500 Control unit, engine electronics
B9540 Hall sensor
B9550 Temperature sensor, air intake
B9560 Coolant temperature sensor (instrument)
B9690 Oxygen sensor
B9690 Oxygen sensor
F9200 Fuse box I
G9230 Battery
K9100 Fuel pump relay
K9110 Engine-electronics relay
K9130 Starter relay
M9100 Fuel pump
R9570 Throttle potentiometer (DKP)
R9580 CO-potentiometer
S9060 Ignition switch
S9080 Right multi-function switch
S9093 Side-stand switch
X9101 DRS engine electronics/fuel pump relay
X9230 Battery positive
X9231 Battery ground
X9232 Ground
X9310 STVB, engine wiring harness
X9400 Ground I
X9401 Connector 31 I
X9430 Connector 30U
X9450 Connector 15U
X9481 Connector 15N
X9490 Connector 15EL
X9501 STVB control unit ground, engine electronics
X9642 Connector, ground sensor
X9643 Connector, shield
X9650 Connector 15V