
A9001 Instrument panel control unit
A9500 Control unit, engine electronics
F9200 Fuse box I
G9230 Battery
K9100 Fuel pump relay
K9110 Engine-electronics relay
K9130 Starter relay
K9140 Fan relay
M9100 Fuel pump
M9140 Fan
R9611 Spark plug 1
R9611 Spark plug 1
R9612 Spark plug 2
R9612 Spark plug 2
R9613 Spark plug 3
R9613 Spark plug 3
R9614 Spark plug 4
R9614 Spark plug 4
S9060 Ignition switch
S9080 Right multi-function switch
S9093 Side-stand switch
T9510 Ignition coil 1
T9520 Ignition coil 2
X9101 DRS engine electronics/fuel pump relay
X9220 STVB fuel level indicator
X9230 Battery positive
X9231 Battery ground
X9232 Ground
X9310 STVB, engine wiring harness
X9400 Ground I
X9401 Connector 31 I
X9430 Connector 30U
X9450 Connector 15U
X9457 Connector 15A7
X9481 Connector 15N
X9490 Connector 15EL
X9501 STVB control unit ground, engine electronics
X9513 Ignition coil ground
X9590 Diagnosis plug
X9643 Connector, shield
X9650 Connector 15V
X9660 Connector V
Y9601 Injection valve 1
Y9602 Injection valve 2
Y9603 Injection valve 3
Y9604 Injection valve 4