
A9001 Instrument panel control unit
A9020 Flasher unit
A9190 ABS control unit
A9500 Control unit, engine electronics
E9010 Headlight
E9015 Side light
F9200 Fuse box I
G9230 Battery
G9240 Alternator
H9030 Front left turn signal indicator
H9040 Front right turn signal indicator
K9100 Fuel pump relay
K9110 Engine-electronics relay
K9120 Load relief relay
K9130 Starter relay
K9140 Fan relay
K9150 Horn relay
K9196 ABS relay
M9130 Starter
R9611 Spark plug 1
R9611 Spark plug 1
R9612 Spark plug 2
R9612 Spark plug 2
R9613 Spark plug 3
R9613 Spark plug 3
R9614 Spark plug 4
R9614 Spark plug 4
S9021 Hazard warning switch
S9051 Brake light switch, hand
S9052 Brake light switch, foot
S9060 Ignition switch
S9070 Left multi-function switch
S9080 Right multi-function switch
S9083 Emergency stop switch
S9084 Starter switch
S9091 Clutch switch
S9092 RFH switch
S9092 RFH switch
S9093 Side-stand switch
T9510 Ignition coil 1
T9520 Ignition coil 2
X9102 DRS horn/load relief relay
X9130 STVB starter relay
X9131 STVB starter
X9133 STVB starter relay
X9134 STVB starter relay
X9188 STVB ABS relay
X9220 STVB fuel level indicator
X9230 Battery positive
X9231 Battery ground
X9233 Gearbox ground
X9241 STVB alternator +
X9310 STVB, engine wiring harness
X9321 STVB on-board socket 1
X9340 STVB lighting/rear direction indicator
X9351 STVB heated handlebar grips
X9354 STVB DWA
X9400 Ground I
X9402 Connector 31 II
X9404 Connector 31 IV

X9430 Connector 30U
X9434 Connector 30A4
X9450 Connector 15U
X9451 Connector 15A1
X9451 Connector 15A1
X9457 Connector 15A7
X9480 Connector 15E
X9481 Connector 15N
X9490 Connector 15EL
X9500 STVB control unit, engine electronics
X9501 STVB control unit ground, engine electronics
X9513 Ignition coil ground
X9690 STVB oxygen sensor
X9690 STVB oxygen sensor