
B9220 Fuel level sensor
F9200 Fuse box I
H9151 Horn I
H9152 Horn II
R9931 Left heated handlebar grip
R9932 Right heated handlebar grip
S9080 Right multi-function switch
S9930 Switch for heated handlebar grips
X9155 STVB horn I
X9156 STVB horn II
X9310 STVB, engine wiring harness
X9321 STVB on-board socket 1
X9351 STVB heated handlebar grips
X9354 STVB DWA
X9400 Ground I
X9401 Connector 31 I
X9402 Connector 31 II
X9434 Connector 30A4
X9451 Connector 15A1
X9451 Connector 15A1
X9457 Connector 15A7
X9482 Connector 58
X9485 Connector horn
X9933 Connector heated handlebar grips