

---

A9020 Flasher unit  
A9500 Control unit, engine electronics  
B9210 Vehicle speed sensor  
B9220 Fuel level sensor  
E9001 Instrument lights  
F9200 Fuse box I  
G9230 Battery  
H9001 Warning light, coolant temperature  
H9002 Telltale light, neutral  
H9010 Lamp indicator lamp  
H9012 Telltale light, high-beam headlight  
H9092 Gear indicator  
H9095 Warning light, engine oil pressure  
H9220 Fuel warning lamp  
H9240 Warning light, battery charge current  
K9120 Load relief relay  
P9002 Revolution counter  
P9210 Speedometer  
S9021 Hazard warning switch  
S9060 Ignition switch  
S9070 Left multi-function switch  
S9071 High beam switch  
S9080 Right multi-function switch  
S9092 RFH switch  
S9092 RFH switch  
S9095 Oil pressure switch  
X9230 Battery positive  
X9231 Battery ground  
X9232 Ground  
X9242 STVB alternator  
X9242 STVB alternator  
X9310 STVB, engine wiring harness  
X9400 Ground I  
X9401 Connector 31 I  
X9430 Connector 30U  
X9450 Connector 15U  
X9480 Connector 15E  
X9483 Connector BL  
X9484 Connector BR  
X9590 Diagnosis plug