
A9001 Instrument panel control unit
A9190 ABS control unit
B9193 Wheel-speed sensor, front
B9194 Wheel-speed sensor, rear
G9230 Battery
H9010 Lamp indicator lamp
H9190 Warning light, ABS
K9110 Engine-electronics relay
K9196 ABS relay
K9197 ABS warning relay
S9060 Ignition switch
S9195 ABS button
X9400 Ground I
X9401 Connector 31 I
X9403 Connector 31 III
X9430 Connector 30U
X9450 Connector 15U
X9590 Diagnosis plug