
A9020 Flasher unit
A9500 Control unit, engine electronics
B9210 Vehicle speed sensor
B9220 Fuel level sensor
E9001 Instrument lights
E9010 Headlight
F9200 Fuse box I
G9230 Battery
G9240 Alternator
H9001 Warning light, coolant temperature
H9002 Telltale light, neutral
H9010 Lamp indicator lamp
H9012 Telltale light, high-beam headlight
H9092 Gear indicator
H9095 Warning light, engine oil pressure
H9220 Fuel warning lamp
H9240 Warning light, battery charge current
K9110 Engine-electronics relay
K9120 Load relief relay
K9130 Starter relay
P9002 Revolution counter
P9210 Speedometer
S9021 Hazard warning switch
S9060 Ignition switch
S9070 Left multi-function switch
S9071 High beam switch
S9080 Right multi-function switch
S9083 Emergency stop switch
S9092 RFH switch
S9092 RFH switch
S9095 Oil pressure switch
T9510 Ignition coil 1
X9232 Ground
X9400 Ground I
X9401 Connector 31 I
X9402 Connector 31 II
X9403 Connector 31 III
X9430 Connector 30U
X9450 Connector 15U
X9480 Connector 15E
X9482 Connector 58
X9483 Connector BL
X9484 Connector BR
X9490 Connector 15EL
X9590 Diagnosis plug