

---

A9500 Control unit, engine electronics  
B9540 Hall sensor  
B9550 Temperature sensor, air intake  
B9560 Coolant temperature sensor (instrument)  
B9690 Oxygen sensor  
B9690 Oxygen sensor  
F9200 Fuse box I  
K9100 Fuel pump relay  
K9110 Engine-electronics relay  
M9100 Fuel pump  
R9570 Throttle potentiometer (DKP)  
R9580 CO-potentiometer  
S9060 Ignition switch  
S9080 Right multi-function switch  
S9093 Side-stand switch  
X9101 DRS engine electronics/fuel pump relay  
X9232 Ground  
X9400 Ground I  
X9402 Connector 31 II  
X9403 Connector 31 III  
X9430 Connector 30U  
X9450 Connector 15U  
X9481 Connector 15N  
X9490 Connector 15EL  
X9632 Ground II  
X9642 Connector, ground sensor  
X9643 Connector, shield  
X9650 Connector 15V