
A9001 Instrument panel control unit
A9020 Flasher unit
A9190 ABS control unit
A9500 Control unit, engine electronics
B9690 Oxygen sensor
B9690 Oxygen sensor
E9010 Headlight
F9200 Fuse box I
G9240 Alternator
H9030 Front left turn signal indicator
H9040 Front right turn signal indicator
K9100 Fuel pump relay
K9110 Engine-electronics relay
K9120 Load relief relay
K9130 Starter relay
K9140 Fan relay
K9196 ABS relay
M9100 Fuel pump
M9130 Starter
M9140 Fan
R9611 Spark plug 1
R9611 Spark plug 1
R9612 Spark plug 2
R9612 Spark plug 2
R9613 Spark plug 3
R9613 Spark plug 3
R9614 Spark plug 4
R9614 Spark plug 4
S9021 Hazard warning switch
S9051 Brake light switch, hand
S9052 Brake light switch, foot
S9060 Ignition switch
S9070 Left multi-function switch
S9080 Right multi-function switch
S9083 Emergency stop switch
S9084 Starter switch
S9091 Clutch switch
S9092 RFH switch
S9092 RFH switch
S9093 Side-stand switch
S9195 ABS button
T9510 Ignition coil 1
T9520 Ignition coil 2
X9015 STVB parking light
X9102 DRS horn/load relief relay
X9130 STVB starter relay
X9131 STVB starter
X9133 STVB starter relay
X9134 STVB starter relay
X9232 Ground
X9321 STVB on-board socket 1
X9351 STVB heated handlebar grips
X9353 STVB radio II
X9354 STVB DWA
X9400 Ground I
X9401 Connector 31 I
X9402 Connector 31 II
X9403 Connector 31 III
X9404 Connector 31 IV
X9430 Connector 30U

X9434 Connector 30A4
X9439 Connector 30A19
X9450 Connector 15U
X9451 Connector 15A1
X9451 Connector 15A1
X9457 Connector 15A7
X9480 Connector 15E
X9481 Connector 15N
X9490 Connector 15EL
X9513 Ignition coil ground
X9632 Ground II
X9643 Connector, shield