
A9001 Instrument panel control unit
F9200 Fuse box I
G9230 Battery
G9240 Alternator
H9002 Telltale light, neutral
H9092 Gear indicator
H9240 Warning light, battery charge current
K9110 Engine-electronics relay
K9120 Load relief relay
K9130 Starter relay
M9130 Starter
S9060 Ignition switch
S9080 Right multi-function switch
S9083 Emergency stop switch
S9084 Starter switch
S9091 Clutch switch
S9092 RFH switch
S9092 RFH switch
X9102 DRS horn/load relief relay
X9130 STVB starter relay
X9131 STVB starter
X9133 STVB starter relay
X9134 STVB starter relay
X9232 Ground
X9350 STVB optional extra
X9400 Ground I
X9401 Connector 31 I
X9402 Connector 31 II
X9403 Connector 31 III
X9430 Connector 30U
X9450 Connector 15U
X9481 Connector 15N
X9490 Connector 15EL