

---

F9200 Fuse box I  
K9901 Relay, raise windscreen  
K9902 Relay, lower windscreen  
M9900 Motor for windscreen adjustment  
S9901 Position switch up  
S9902 Position switch down  
X9404 Connector 31 IV  
X9407 Connector 31 VII  
X9439 Connector 30A19  
X9454 Connector 15A3  
X9900 STVB windscreen adjustment  
X9901 DRS disc relay