
A9500 Control unit, engine electronics
B9540 Hall sensor
B9550 Temperature sensor, air intake
B9560 Coolant temperature sensor (instrument)
B9690 Oxygen sensor
B9690 Oxygen sensor
F9200 Fuse box I
K9100 Fuel pump relay
K9110 Engine-electronics relay
M9100 Fuel pump
R9570 Throttle potentiometer (DKP)
R9580 CO-potentiometer
S9060 Ignition switch
S9080 Right multi-function switch
S9093 Side-stand switch
X9101 DRS engine electronics/fuel pump relay
X9232 Ground
X9400 Ground I
X9402 Connector 31 II
X9403 Connector 31 III
X9430 Connector 30U
X9450 Connector 15U
X9481 Connector 15N
X9490 Connector 15EL
X9632 Ground II
X9642 Connector, ground sensor
X9643 Connector, shield
X9650 Connector 15V