

---

A9001 Instrument panel control unit  
A9500 Control unit, engine electronics  
F9200 Fuse box I  
G9230 Battery  
K9100 Fuel pump relay  
K9110 Engine-electronics relay  
K9140 Fan relay  
M9100 Fuel pump  
M9140 Fan  
R9611 Spark plug 1  
R9611 Spark plug 1  
R9612 Spark plug 2  
R9612 Spark plug 2  
R9613 Spark plug 3  
R9613 Spark plug 3  
R9614 Spark plug 4  
R9614 Spark plug 4  
S9060 Ignition switch  
S9080 Right multi-function switch  
S9093 Side-stand switch  
T9510 Ignition coil 1  
T9520 Ignition coil 2  
X9101 DRS engine electronics/fuel pump relay  
X9220 STVB fuel level indicator  
X9232 Ground  
X9400 Ground I  
X9402 Connector 31 II  
X9403 Connector 31 III  
X9430 Connector 30U  
X9450 Connector 15U  
X9457 Connector 15A7  
X9481 Connector 15N  
X9490 Connector 15EL  
X9513 Ignition coil ground  
X9590 Diagnosis plug  
X9632 Ground II  
X9643 Connector, shield  
X9650 Connector 15V  
X9660 Connector V  
Y9601 Injection valve 1  
Y9602 Injection valve 2  
Y9603 Injection valve 3  
Y9604 Injection valve 4