

---

E9358 Map light  
F9200 Fuse box I  
G9230 Battery  
S9060 Ignition switch  
X9232 Ground  
X9356 STVB map light -  
X9357 STVB map light +  
X9358 STVB map light  
X9400 Ground I  
X9404 Connector 31 IV  
X9430 Connector 30U  
X9458 Connector RA8