

---

A9001 Instrument panel control unit  
F9200 Fuse box I  
G9230 Battery  
G9240 Alternator  
H9002 Telltale light, neutral  
H9092 Gear indicator  
H9240 Warning light, battery charge current  
K9110 Engine-electronics relay  
K9120 Load relief relay  
K9130 Starter relay  
M9130 Starter  
S9060 Ignition switch  
S9080 Right multi-function switch  
S9083 Emergency stop switch  
S9084 Starter switch  
S9091 Clutch switch  
S9092 RFH switch  
S9092 RFH switch  
X9102 DRS horn/load relief relay  
X9130 STVB starter relay  
X9131 STVB starter  
X9133 STVB starter relay  
X9134 STVB starter relay  
X9232 Ground  
X9350 STVB optional extra  
X9400 Ground I  
X9401 Connector 31 I  
X9402 Connector 31 II  
X9403 Connector 31 III  
X9430 Connector 30U  
X9450 Connector 15U  
X9481 Connector 15N  
X9490 Connector 15EL