

drawing number: 2 305 000

A9001 ### Kombiinstrument ###	4
A9190 ABS control unit	66
A9500 Motronic control unit	110
A9530 ### Zündungsendstufe ###	88
B9220 Fuel gauge transmitter	61
B9540 Hall-effect transmitter	95
B9550 Air temperature sensor	92
B9560 ### Temperaturfühler Wasser ###	95
B9690 Oxygen-Sensor	103
F9001 ### Sicherung 1 ###	48
F9005 ### Sicherung 5 ###	48
F9006 ### Sicherung 6 ###	48
F9007 ### Sicherung 7 ###	48
F9200 Fuse box	48
G9230 Battery	31
G9240 Alternator	24
H9001 ### Warnleuchte Kühlmitteltemperatur ###	4
H9002 Neutral telltale	3
H9090 Bulb telltale	4
H9092	4
H9095 Oil pressure telltale	4
H9240 Battery charge telltale	4
K9100 Fuel pump relay	60
K9110 Motronic relay	55
K9120 Load relief relay	45
K9130 Starter motor relay	32
K9140 Fan relay	55
M9100 Fuel pump	61
M9130 Starter motor	39
M9140 ### Lüfter ###	45
P9002 ### Drehzahlmesser ###	4
R9570 Throttle butterfly potentiometer	105
R9580 Co-potentiometer	99
R9611 Spark plug 1	79
R9612 Spark plug 2	73
R9613 ### Zündkerze 3 ###	74
R9614 ### Zündkerze 4 ###	81
S9060 Ignition light switch	13
S9080 Combined switch, right	25
S9083 Emergency "Off" switch	27
S9084 Starter switch	
S9090 ### Chokekontroll-Schalter ###	18
S9091 Clutch-operated switch	20
S9092 Transmission switch	9
S9093 Side stand switch	36
S9095 Oil pressure switch	7
T9510 Dual-spark coil	74
T9520 ### Zündspüle 2 ###	80
X9232 Battery earth (ground)	31
X9310 ### Steckverbindung Fahrgestell/Motor ###	67
X9400 Frame earth (ground)	15/41
X9590 Diagnosis plug	72
X9632 ### Masse II ###	88
Y9601 Valve 1	75
Y9602 Valve 2	78
Y9603 ### Ventil 3 ###	81
Y9604 ### Ventil 4 ###	84