

drawing number: 2 305 101

A9001 #### Kombiinstrument ###	82
A9002 #### Uhr ###	80
A9010 Instrument cluster	68
A9020 Flasher unit	83
B9210 #### Tachogeber ###	96
B9220 Fuel gauge transmitter	68
E9001 Low-beam headlight	81, 84, 85
E9010 Headlight	3
E9011 Dipped-beam headlight	2
E9012 High-beam headlight	2
E9013 Rear light	107
E9015 Parking light	3
F9001 #### Sicherung 1 ###	40
F9002 #### Sicherung 2 ###	40
F9003 #### Sicherung 3 ###	40
F9004 #### Sicherung 4 ###	40
F9007 #### Sicherung 7 ###	40
F9200 Fuse box	40
G9230 Battery	15
H9010 Oil pressure warning light	87
H9012 High-beam headlight telltale	78
H9030 Front left flashing turn indicator	8
H9031 Left-hand indicator telltale	85
H9035 Front right flashing turn indicator	107
H9040 Rear left flashing turn indicator	8
H9041 Turn indicator repeater, right	84
H9045 Rear right flashing turn indicator	107
H9050 Brake light	107
H9151 #### Horn links ###	2
H9152 #### Horn rechts ###	2
H9220 #### Warnleuchte für Tankreserve ###	76
K9110 Motronic relay	100
K9120 Load relief relay	25
K9150 Horn relay	46
M9100 Fuel pump	65
M9130 Starter motor	20
P9210 #### Tacho ###	90
S9021 Hazard warning flasher switch	91
S9051 Brake light switch, hand-operated	57
S9052 Brake light switch, foot-operated	62
S9060 Ignition light switch	25
S9070 Combined switch, left	34
S9071 High-beam headlight switch	34
S9072 Horn switch	37
S9073 Indicator switch, left	35
S9080 Combined switch, right	33
S9081 Light switch	31
S9082 Indicator switch, right	37
S9085 Indicator cancel switch	35
X9010 Plug connection -front indicators	3
X9021 #### Anschluß Warnblinkschalter ###	91
X9310 #### Steckverbindung Fahrgestell/Motor ###	96
X9321 Power socket connection	51
X9322 #### Anschluß Steckdose 2 ###	51
X9232 Battery earth (ground)	15
X9340 Plug connection, rear section	102
X9351 Plug connection, heated handlebar grips	13
X9352 #### Steckverbindung Zusatzinstrumente ###	57
X9354 Thiefproofing device plug connection	47
X9400 Frame earth (ground)	12/48/54/72/99